IRONSMITH

TGL SERIES UP LIGHT

ARCHITECTURAL PRODUCTS

INSTALLATION INSTRUCTIONS

INSTRUCTIONS PERTAINING TO RISK OF FIRE, OR INJURY TO PERSONS WARNING! To reduce the risk of FIRE OR INJURY TO PERSONS

- 1. Do not touch luminaire while lamp is on. Turn off/unplug and allow to cool before replacing lamp.
- Lamp gets HOT quickly! Contact only switch/plug when turning on.
- 3. Do not touch hot lens, faceplate, body, or cap.
- 4. Keep lamp away from materials that may burn.
- 5. Do not touch lamp at any time. Use a soft cloth. Oil from your skin may damage lamp.
- 6. Do not operate the luminaire with damaged or missing parts.
- 7. Do not disassemble lamp housing beyond cap removal to facilitate lamp replacement
- 8. Remove any debris accumulated on the faceplate, in the housing, or in the body fins when necessary.
- 9. Do not install luminaire within 10 feet of a pool, spa, or fountain.
- 10. Have fixture installed in accordance with all applicable installation codes and standards by a person familiar with the construction and operation of the fixture and the hazards involved.
- 11. Use only cable rated for low voltage. Cable buried more than 6" must be suitable for direct burial.
- 12. Use only lamps rated for this fixture. 12 volt 35 watt maximum MR16

SAVE THESE INSTRUCTIONS

INSTALLATION


- 1. If preinstalled, remove light well cover from tree grate.
- 2. With tree grate installed, excavate under light opening to the depth of the Shield (About 7" below grade) enough to allow shield to drop fully into grate.
- 3. In poor draining soils, excavate an additional 3" below bottom of shield and fill space to bottom of shield with gravel for drainage.
- 4. Attach lamp housing and Yoke Assembly to the Cover Plate with the three screws provided
- 5. feed Supply Cable through Shield.
- 6. Drop Shield into tree grate opening insuring it seats fully on lip.
- Connect Supply Cable to 16-2 Cable on fixture. Allow enough cable length to permit complete removal of Assembly from Light well for re-lamping. Ensure power being supplied is appropriate to fixture.
- 8. Insert Cover Plate with Lamp Assembly into Light well and secure with screw.

AIMING OF FIXTURE

- 1. Caution! Fixture will be hot if lamp is on.
- 2. Remove Cover plate screw and lift assembly out of tree grate.
- 3. Loosen Vertical Aiming Screws
- 4. Adjust Yoke as desired
- 5. Tighten Screws
- 6. Replace Assembly in Light well opening.

RE-LAMPING

- 1. Remove power from fixture and let cool before touching.
- 2. Remove Cover Plate with attached assembly from tree grate.
- 3. Separate Yoke Assembly from Cover Plate by removing three screws.
- 4. Loosen Set Screw on lamp housing. Do NOT remove set screw!
- Remove Lamp Housing Top by slowly twisting and pulling to reduce risk of damage to O-Ring.
- Pull lamp straight out. Caution! Lamp my still be hot! Be sure lamp has cooled before touching.
- Push new lamp straight in. Be sure pins are properly aligned. Be sure correct Lamp wattage is used. See inside lamp housing for Lamp ratings.
- Install Lamp Housing Top by slowly twisting and pushing. Due to tight O-Ring seal you will notice resistance as air pressure builds up.
- Seat Top fully and tighten set screw until it just bottoms out. Do NOT over tighten set screw! Distortion of the housing can allow moisture in causing fixture failure.
- 10. Remount Yoke to Cover and Reinstall in tree grate.

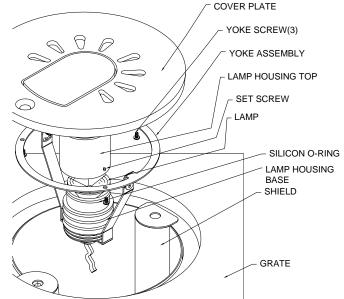

ership by

